

Small Footprint Backroom Optimization



Easy to Use

With its intuitive touchscreen, the 840 Manual Label Printer guides employees quickly through the labeling process, reducing training time needed. More experienced operators can enter PLUs using the tactile numeric keypad for even faster results.



Fewer Label Roll Changes

Thanks to its large 9-inch label roll capacity, the 840 Manual Label Printer requires fewer roll changes and achieves superior operational uptime. The easy-access, front-loading drawer allows roll changes to be completed quickly.



High-Performance Printer

Achieving a print speed of up to 100 mm/s, the 840 Manual Label Printer provides in high-volume, weight-independent price labeling applications – whether in grocery backrooms, backeries or in deli stores for priced by count, prepacked items.



Streamlined Data Management

Round-the-clock access to real-time product and sales data is essential to manage fresh food items profitably. The 840 Manual Label Printer connects easily to the grocery retailer's ERP system to enhance its fresh food management – both in terms of tracking and traceability as well as back office connectivity – and can be equipped with a barcode reader.



840 Manual Label Printer Manual Weigh Price Labeler

The METTLER TOLEDO 840 Manual Label Printer is the ideal choice for grocery retailers who want to equip the meat backroom or look for a powerful label printer for priced by weight or by count prepacked items in the deli or produce areas. The 840 Manual Label Printer enables retailers to enhance their backroom with a hand wrap station which excels in manual weighing and fast labeling. Hence the 840 Manual Label Printer is the perfect addition to METTLER TOLEDO's 800 series of automatic and semi-automatic wrapping and labeling machines.

- **Large label roll – longer production runs, higher operational uptime**
- **Easy to use – reducing training time needed**
- **Fast label printing – suitable for high volume label printing**
- **Eye-catching labels – high quality printing with custom graphics**

A One-Stop Shop for Backroom Optimization

METTLER TOLEDO supports grocery retailers throughout the entire lifetime of their backroom solutions – by advising on product decisions, installing and implementing the devices and systems, and providing maintenance and after-sales service as well as supplying consumables.



Technical data

840 Manual Label Printer

Applications

Manual label printing for price by weight or count items (scale included)

Manual weighing, wrapping* and labeling

Dual mode: 2 label printers can operate with 1 scale

Print Speed

100 mm/s

Label Printer

Direct thermal print head

Weighing Platter

Stainless steel

Weighing Capacity

0 – 6 Kg x 2 g

6 – 15 kg x 5 g

Operating Environment

- 5 °C – 45 °C

Label Sizes

38 - 80 mm width

30 - 200 mm length

Label Roll

Inside diameter: 76 mm

Outside diameter: 230 mm

Power Supply

240 V AC, Single Phase

50 – 60 Hz, 4 A

RAM

34 MB

Operating System

Embedded Linux OS

Operator Interface


Adjustable 10,4 inch Color LCD touch-screen panel with positive input response

Tactile keypad

* requires hand wrap station

For tray and film specifications associated to use with manual wrap station, please see hand wrap station specification.

Dimensions in cm

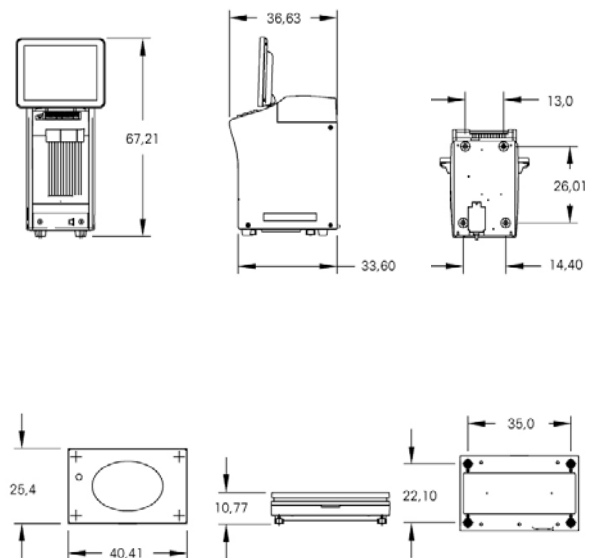

Mettler-Toledo GmbH

Heuwinkelstrasse 3
CH-8606 Nänikon, Switzerland
Phone:+41 44 944 22 11

Subject to technical changes.

© 02/2016 Mettler-Toledo GmbH

Printed in Switzerland, 29230742

Global MarCom Switzerland, 1832 RT

www.mt.com/retail

For more information

